



# Installation Instructions

## Overhead Concealed Door Closers Series 7900-B, 7900-CP & 7900-OP Non-Hold-Open Models



**ASSA ABLOY**

*For wood or metal doors 1- 3/4" to 2 -1/4" (45-57mm) thick  
hung in a hollow metal frame  
standard butt hinges, center pivots or offset pivots*

**CAUTION**  
An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These instructions should be followed to avoid the possibility of misapplication or misadjustment.

### Typical Installation

- One track & closer position for all door opening angles
- Easy arm attachment
- Removable Frame Stop Required\*-Not Shown

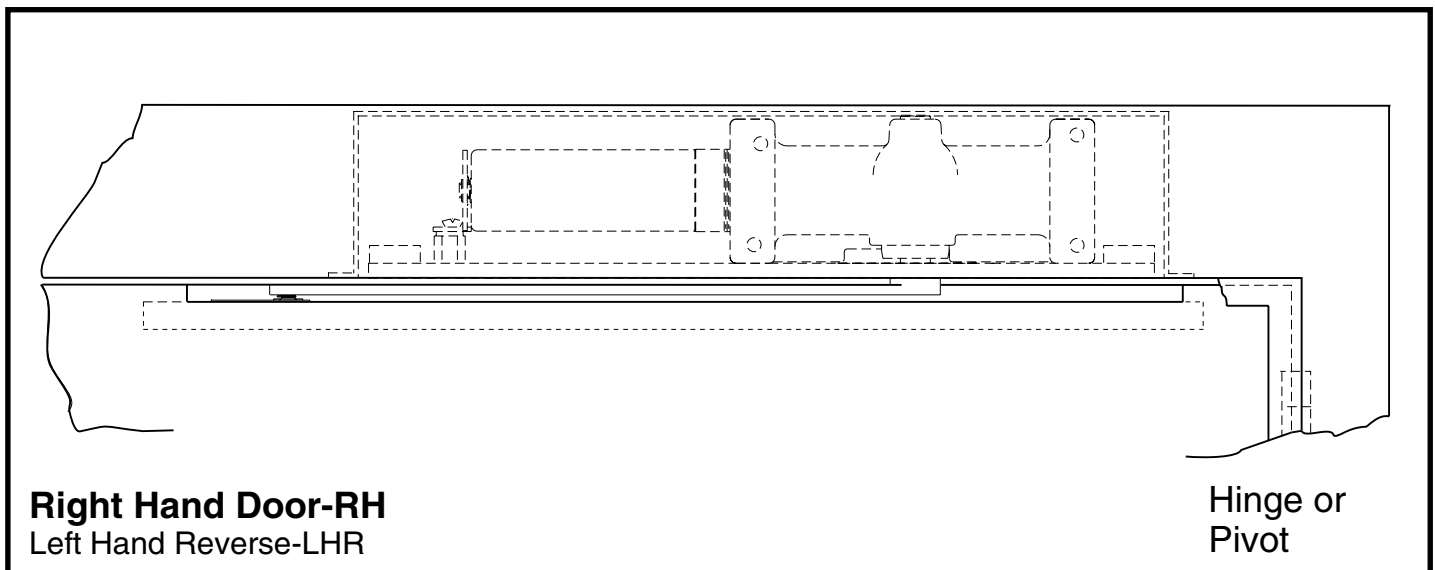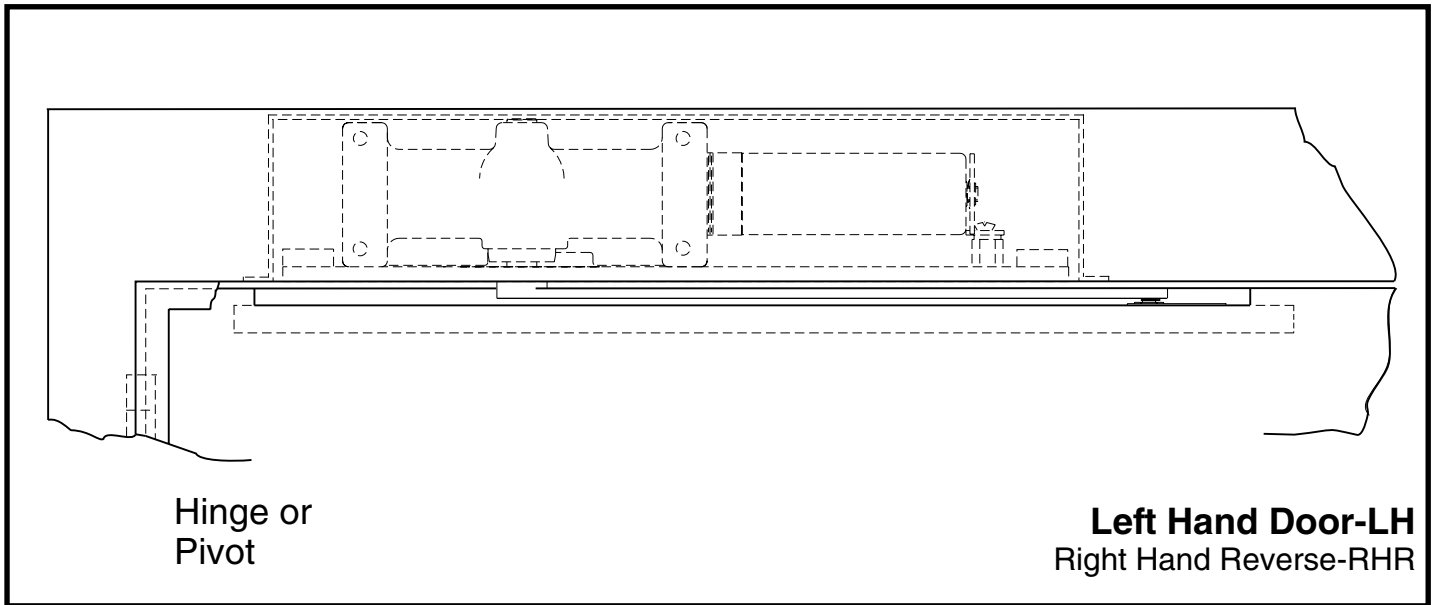

\*Not required when frame rabbet exceeds 2-3/16"







# Installation Sequence

- **Determine hand of door** from illustration on page 1. Closers are handed. Hand of closer must match hand of door.

- **Using template dimensions** on page 2, 3 or 4, locate & prepare holes and cutouts in frame and door.

**Door:**

Prepare door for track. Prepare (4) holes for 1/4-20 machine or #14 wood screws.

**Frame:**

Prepare the frame for mounting closer. Drill and tap (4) holes for 1/4-20 machine screws or #14 wood screws.


***Note:** Generally on new construction hardware cutouts are made by suppliers at their shop.*

- **Mount closer to frame.**

Position spring tube away from hinge or pivot and mounting plate flush with frame rabbet. Secure with 1/4-20 x 5/8 or #14 1-1/4 phillip drive mounting screws.

- **Install arm on closer pinion** (see illustration below).

Position arm counterbore facing down with index mark aligned with pinion index mark. Install onto pinion. Secure with washer and 1/4-20 x 3/4" long flat head hex drive arm screw with red threadlock.

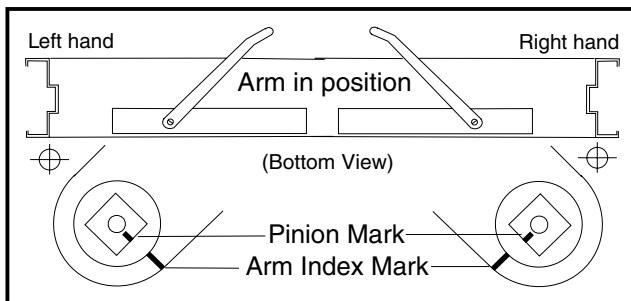

- **Install track in door.**


Place the assembled track into door cutout with open side up, cushion and stop block toward the hinge or pivot. Move slider to the opposite end of track (see illustration). Secure track with (4) 1/4-20 undercut machine screws or #14 wood screws.

- **Connect arm to track.** Open door to approximately 5" (127mm), rotate arm to slider and place end on stud. Use a screw driver to align the square on slider's stud with the arm square (see illustration to right).

Push down on arm to seat stud and to prevent stud from rotating. Secure with arm screw 1/4-20 x 3/4" long flat head hex drive with red threadlock.

- **Determine door opening angle.**

See pages 2, 3 & 4.

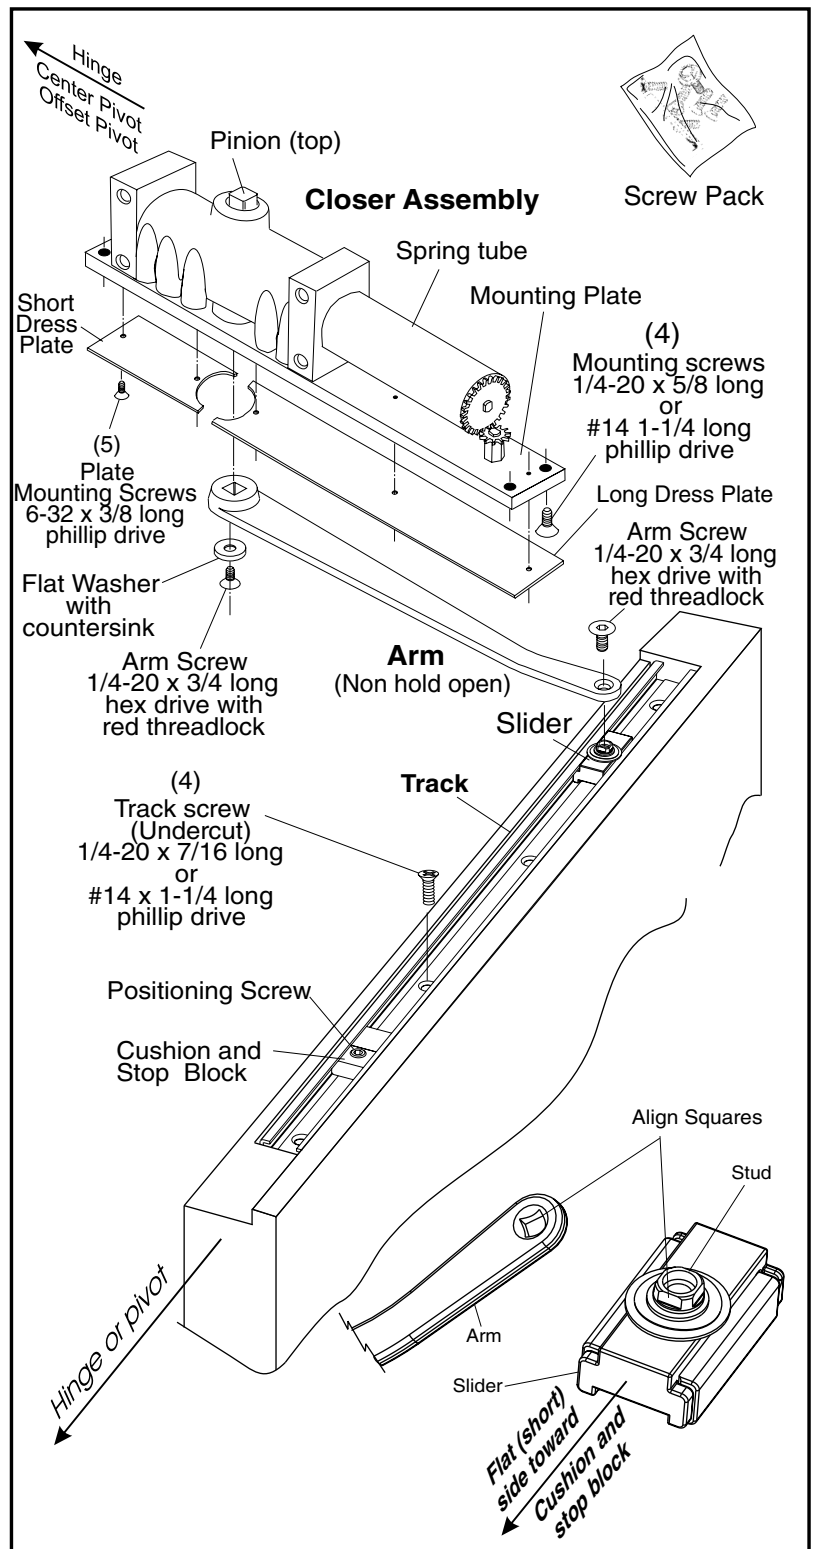


- **Set door opening angle.** Open door to the angle you want the door to stop. With the door held at that location, slide cushion and stop block against slider. Tighten the stop position screw (large set screw) with 3/16" hex wrench (from screw pack) until secure. Release door.

# Series 7900-B, 7900-CP & 7900-OP

Non-Hold Open  
Overhead Concealed  
Door Closers


## Closer Adjustment

**CAUTION:**  
Do not back valves out of  
closer or a leak will result.

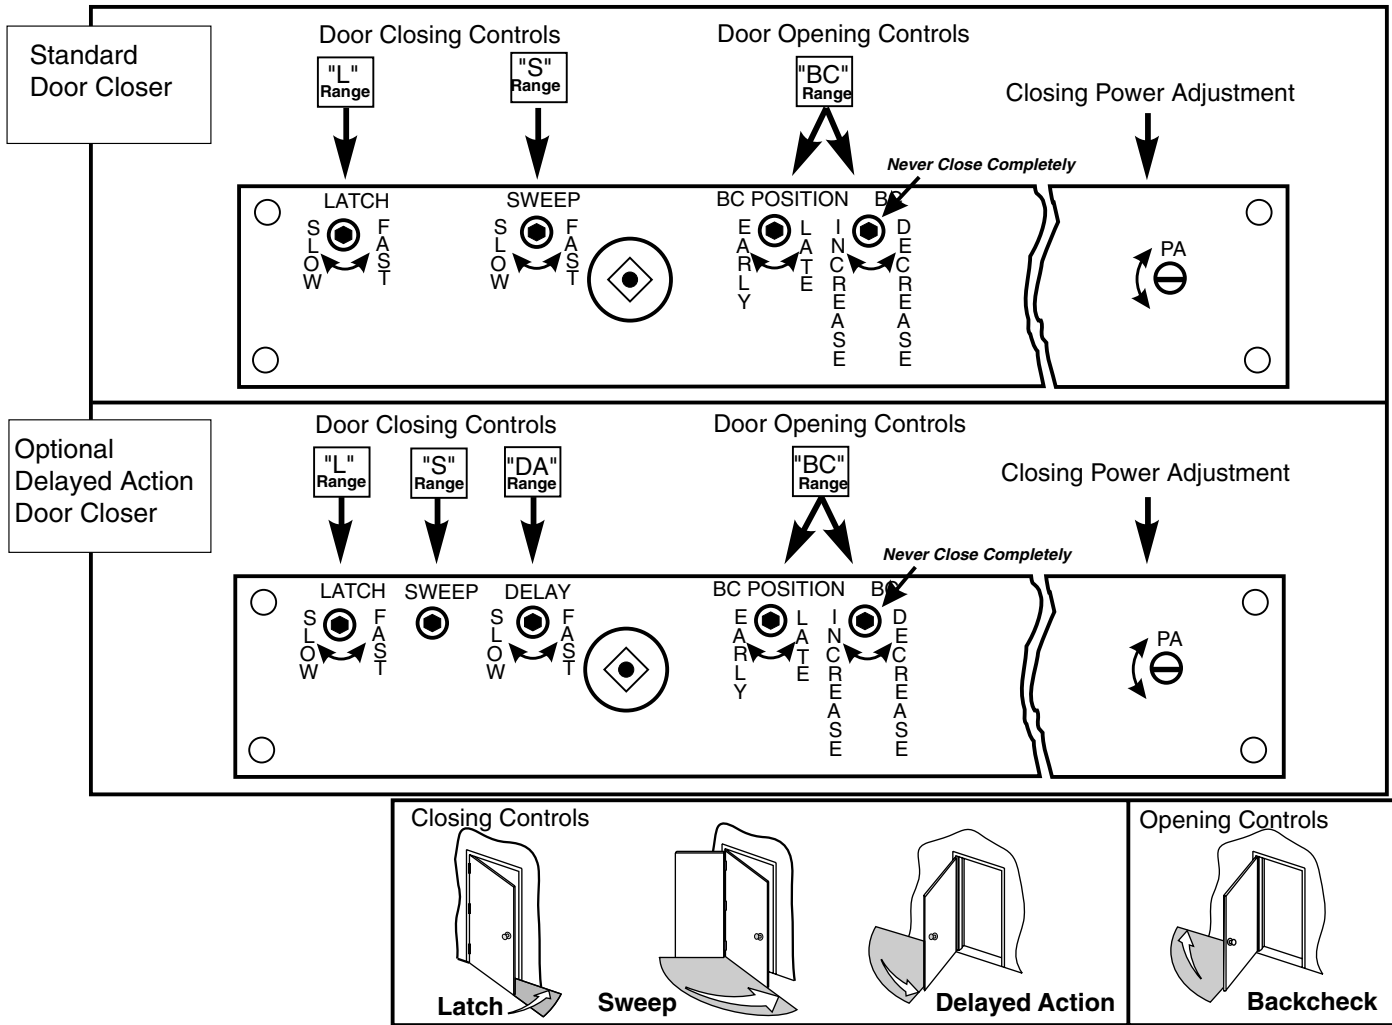

- **Closer Controls** accessible through mounting plate for closer adjustment:  
Use 1/8" (3mm.) hex-key for valve adjustments.  
Use standard screwdriver for power adjustment.
- **Power Adjustment** permits increasing door closing force.  
Controlled by slotted screw marked "P.A."
- **Closing Speed** controlled by valves marked "SWEEP" and "LATCH".  
Attention: Adjust closing speed time to between 4 to 7 seconds from 90°.  
Use of the door by handicapped, elderly, or small children may require greater closing time.
- **Delayed Action** option permits door to creep from fully open to about 70°. Creeping time controlled by valve marked "DELAY".
- **Backcheck** cushions or slows the opening of a door that is forced to travel faster than conditions require.  
Backcheck controlled by valves marked "BC POSITION" (open for backcheck start at a greater door opening angle) and "BC" (for adjusting backcheck intensity). Never close "BC" valve completely.
- **Optional Enhanced Backcheck** provides adjustable backcheck intensity beginning at approximately 15° of the door opening cycle. Backcheck positioning valve is omitted when this feature is provided.

• **Install Dress Plates** (see page 5).

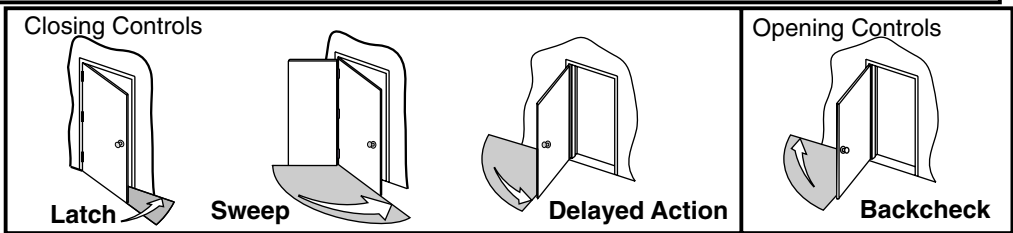

**Norton**  
**ASSA ABLOY**

3000 Highway 74 East • Monroe, NC 28112  
Tel: (877)-974-2255 • Fax: (800)-338-0965  
www.nortondoorcontrols.com